



MOBILE STAND
for the BalanceBox® 650



WARNING MAXIMUM SLOPE

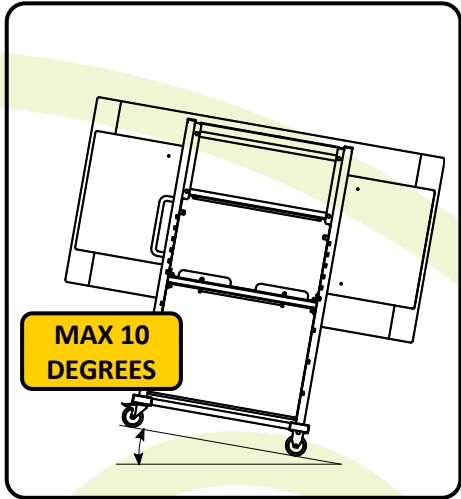

WARNING DO NOT PULL DOWN SLOPE

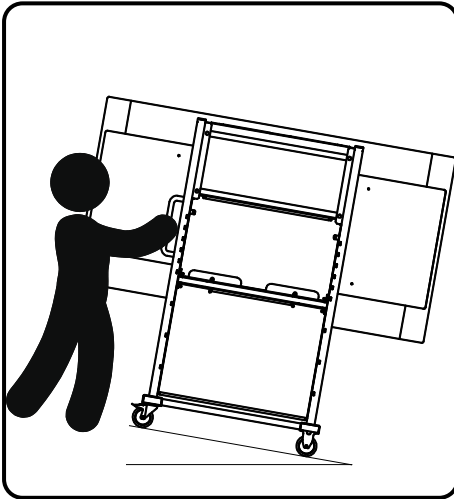

STAY ABOVE CART WHEN MOVING DOWN SLOPE

ALWAYS USE THE HANDLE WITH BOTH HANDS TO MOVE THE CART



CAUTION

This cart is intended for use with a BalanceBox® height adjustable mount and flat screen or touchscreen TV or Interactive whiteboard weighing not more than:


372 Lbs (169 kg).

Use with other products may result in instability causing possible injury.



CAUTION

“This cart is Intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.”

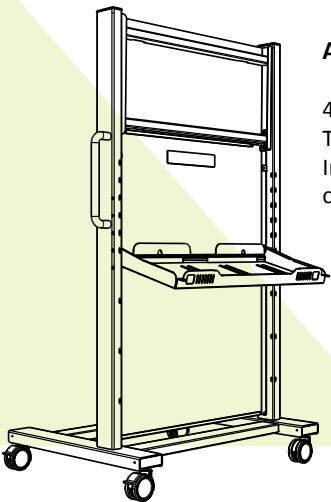


ACCESSORIES



481A51: Laptop tray for BalanceBox® 650 Mobile stand
The laptop tray can be mounted on the back of the mobile stand to support a laptop.
In closed position it forms a compartment that can be locked for security, the compartment can house a mini PC or laptop, it has openings for wiring and cable connections.

BalanceBox®
HEIGHT ADJUSTABLE MOUNTS


MOBILE STAND
for the BalanceBox® 650
Installation manual

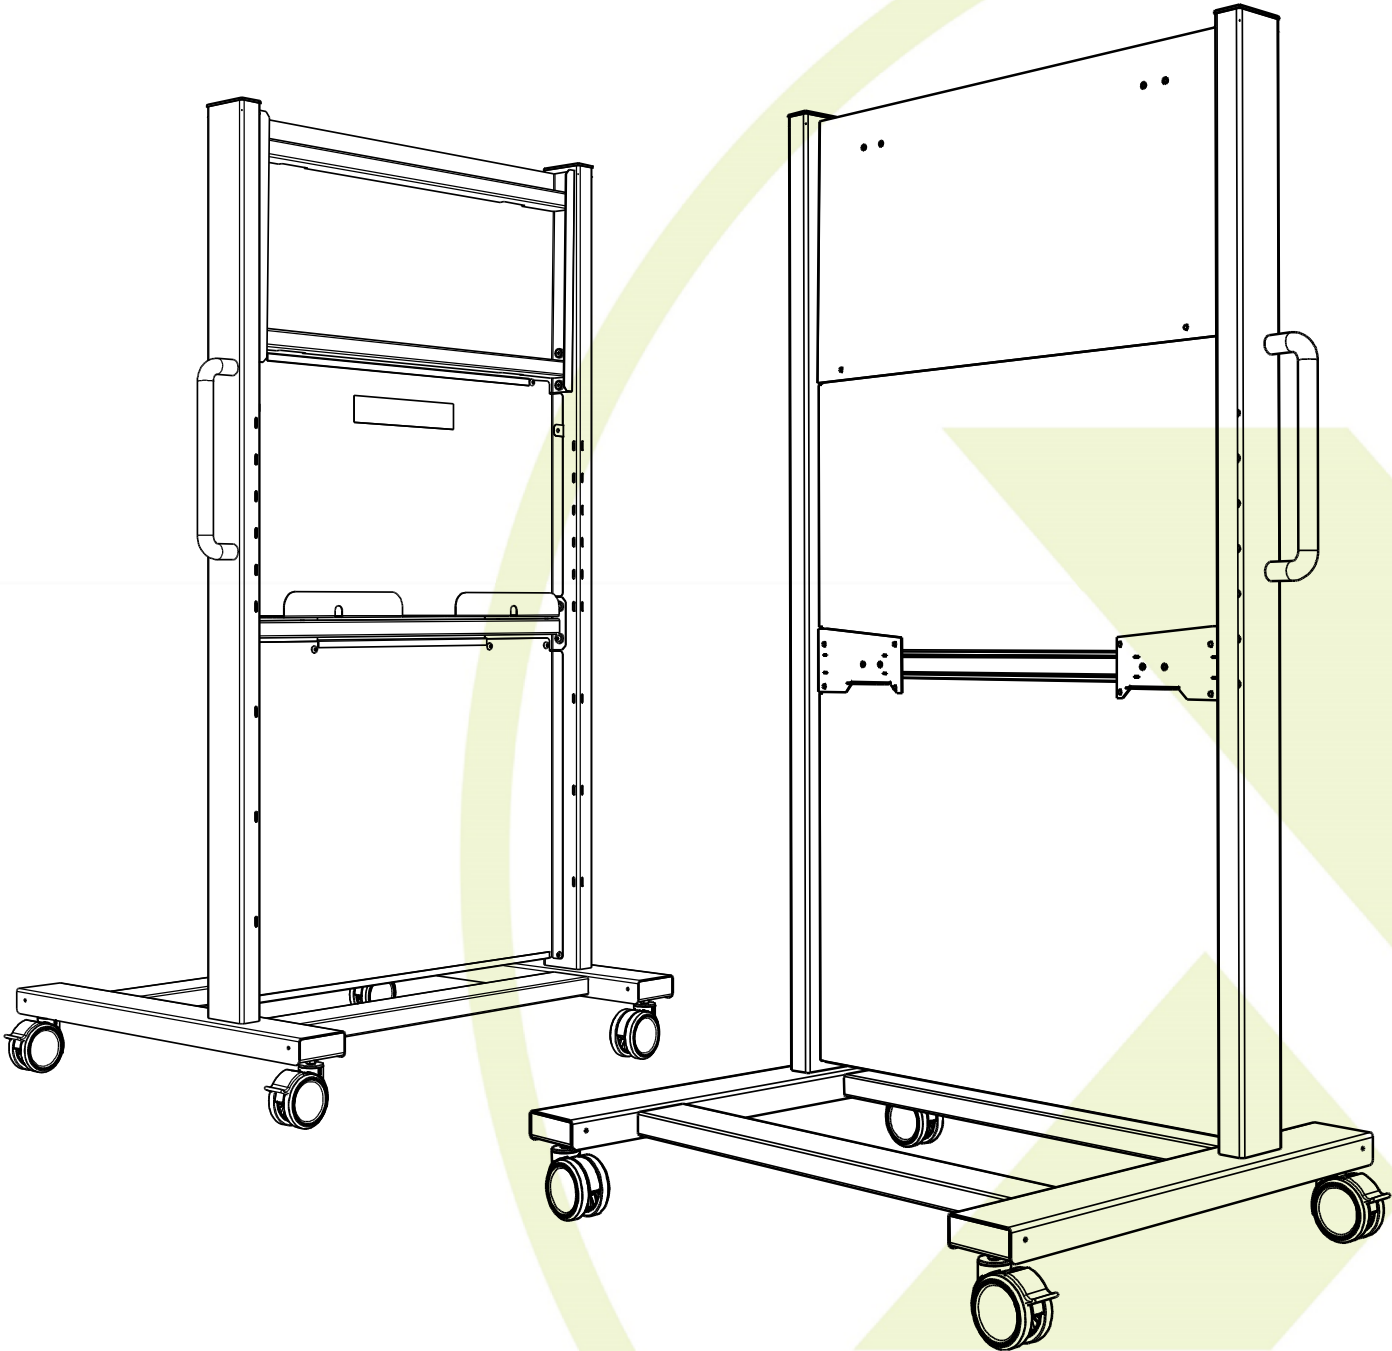


partnr: 902850-00

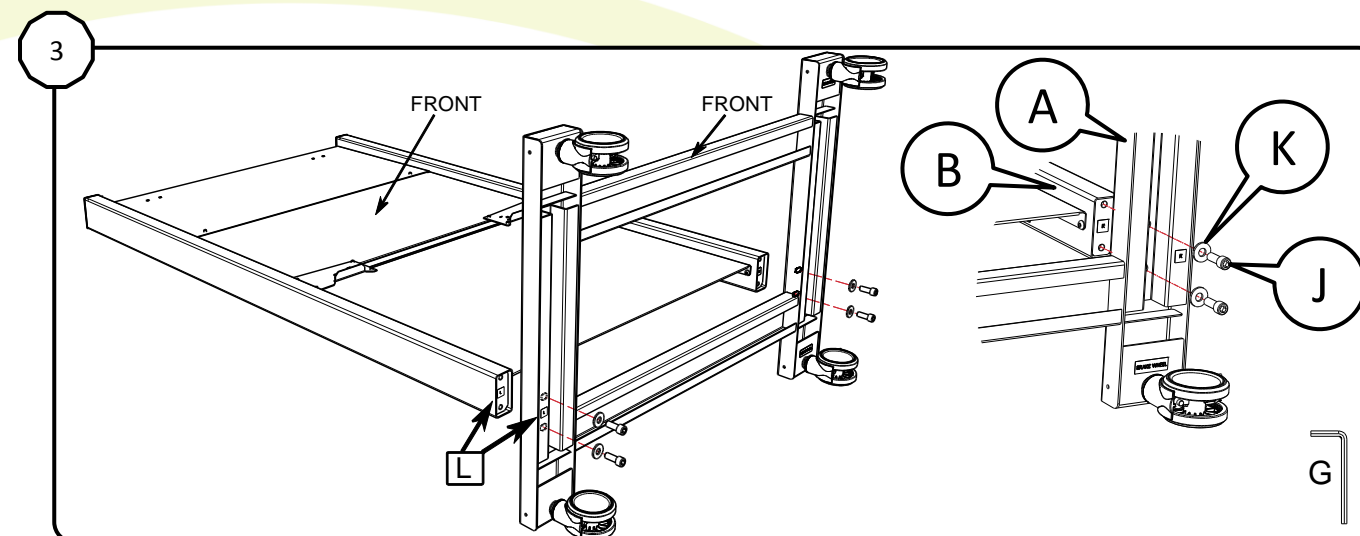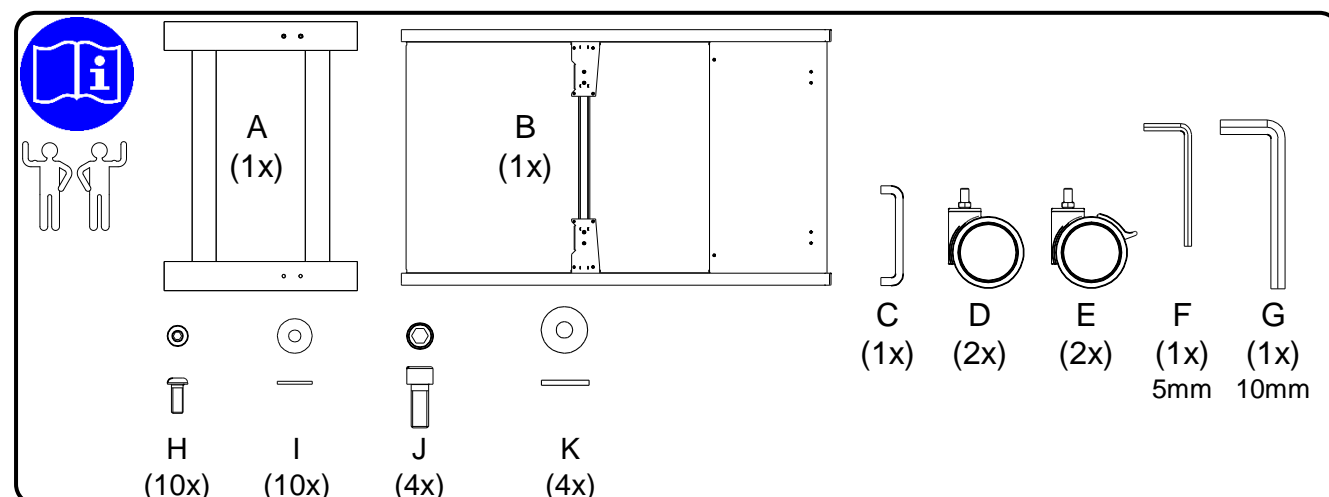


Assemble wheelframe (A) and top frame (B) from the bottom. Match the left (L) and right (R) labels on wheelframe and topframe, tighten well (● 10 mm)

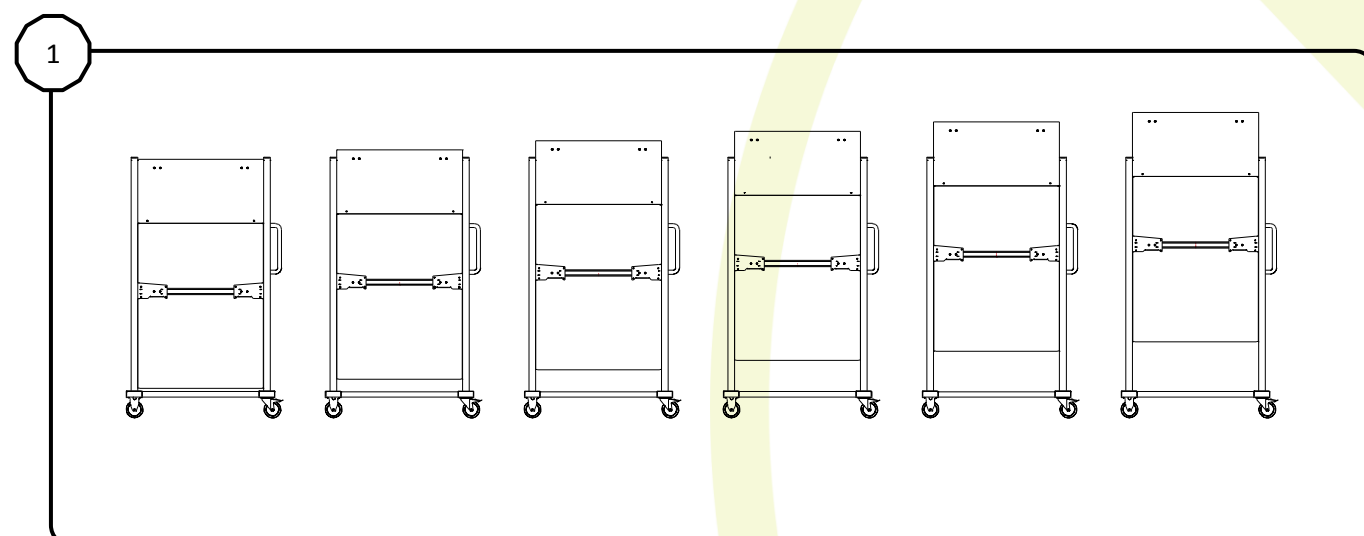


Choose frame height and adjust (● 5 mm) refer to the separate instruction

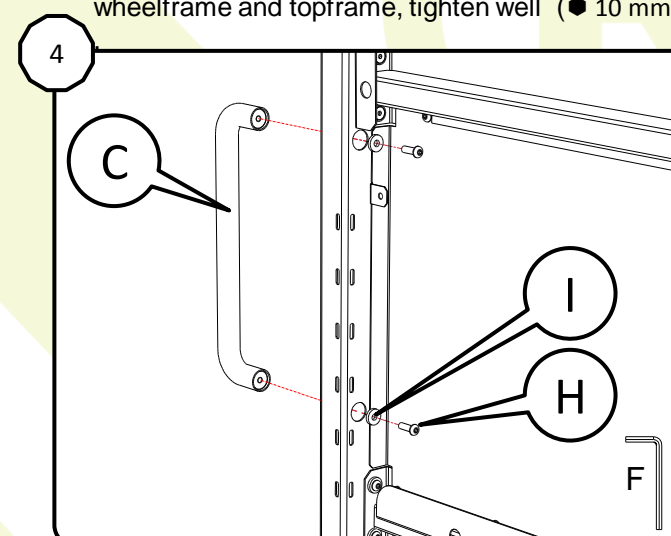


Assemble the handle to the frame (● 5 mm)

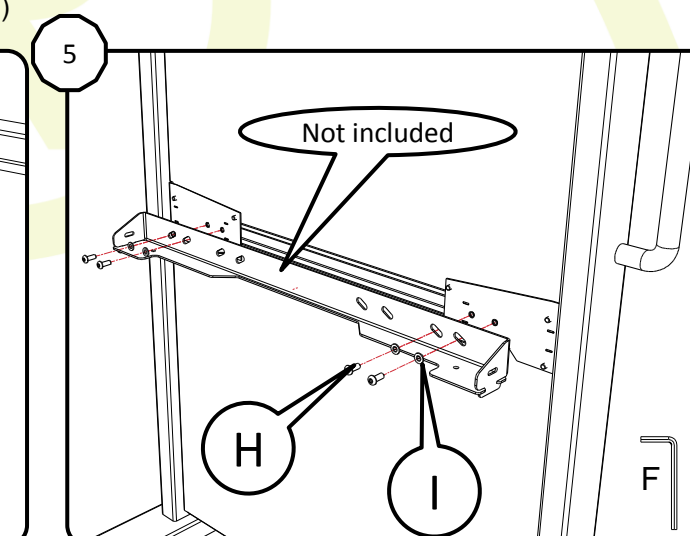


Mount the BalanceBox® 650 wall bracket to the frame as shown (● 5 mm)

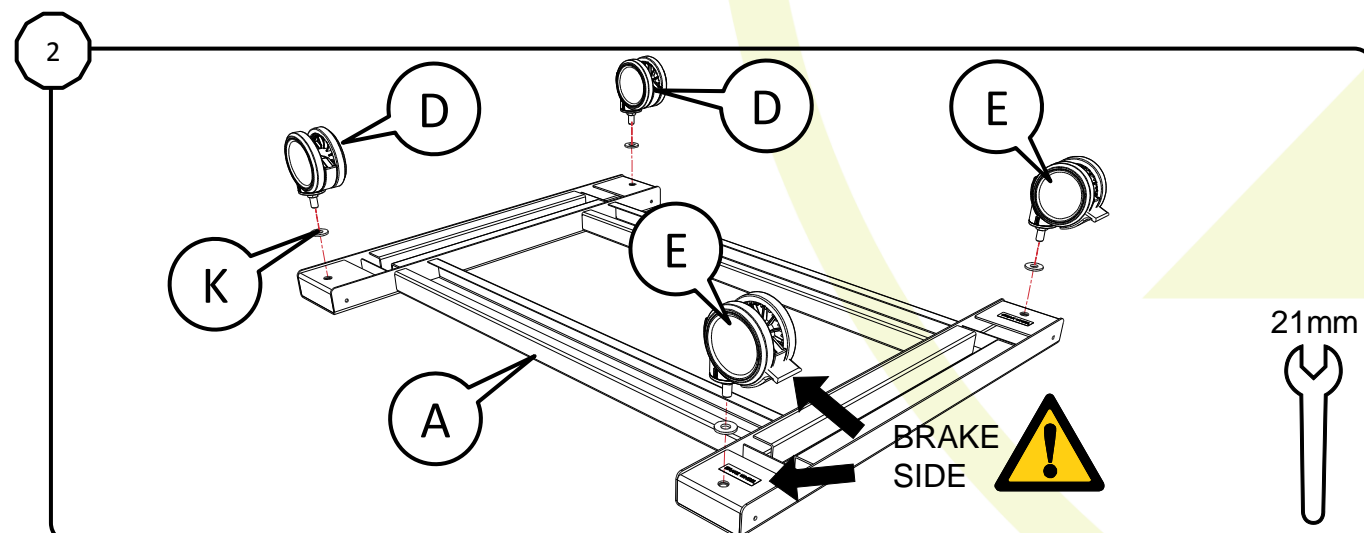

Assemble the wheels on the wheel frame (21 mm wrench), note wheel E with brake goes on the side with the sticker.

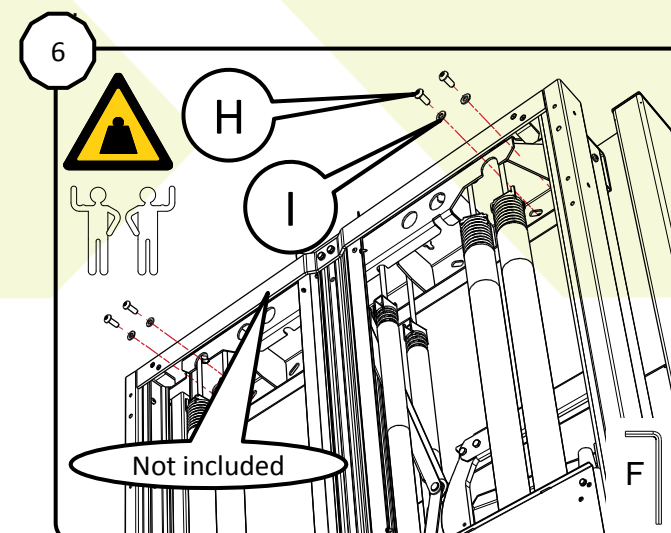

Mount the BalanceBox® 650 on the wall bracket and assemble the screws at the top (● 5 mm).

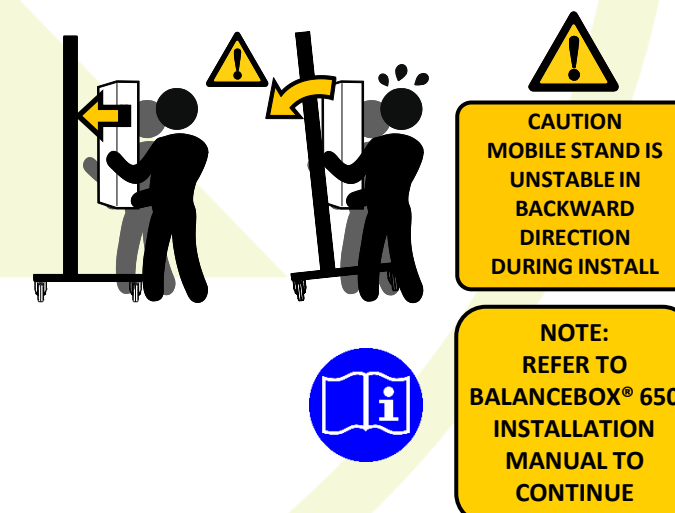

BalanceBox 650® and the wall bracket are not included with the Mobile stand 481A50